


WELL™ QUAD-M

WIRELESS EVENT LED LUMINAIRE

User Manual

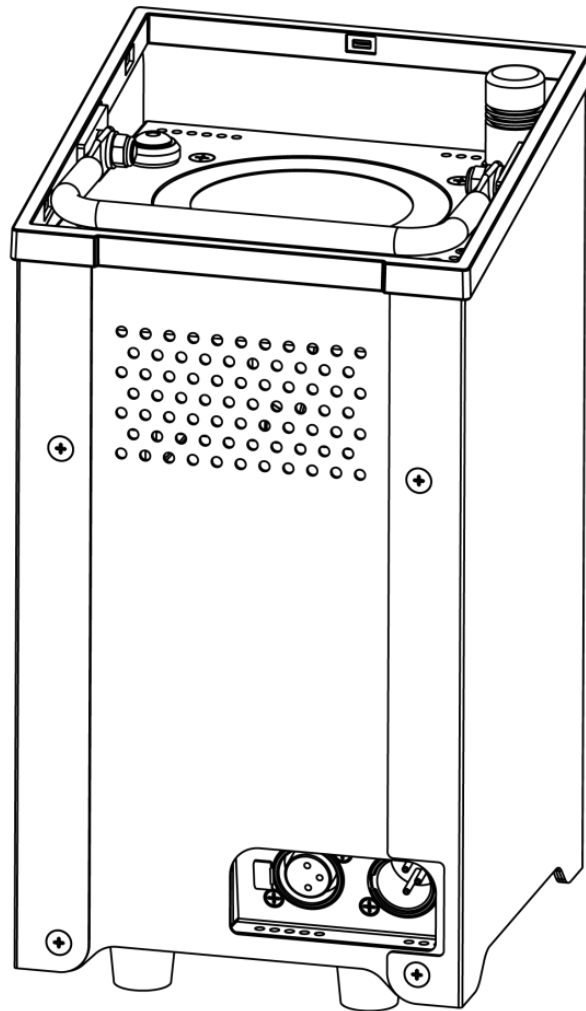

Edition Notes This user manual covers the description, safety precautions, installation, programming, operation, and maintenance of the WELL™ Quad-M.
Chauvet released this edition of the WELL™ Quad-M user manual in May 2014.

Trademarks CHAUVET® is a registered trademark of CHAUVET & Sons Inc. (d/b/a CHAUVET® or Chauvet). The CHAUVET® logo in its entirety including the CHAUVET® name and the dotted triangle, and all other trademarks in this manual pertaining to services, products, or marketing statements are owned or licensed by CHAUVET®. Any other product names, logos, brands, company names, and other trademarks featured or referred to within this document are the property of their respective trademark holders.

Copyright Notice Chauvet owns the content of this user manual in its entirety, including but not limited to pictures, logos, trademarks, and resources.

© Copyright 2015 Chauvet. All rights reserved.

Electronically published by Chauvet in the United States of America.

Manual Use Chauvet authorizes its customers to download and print this manual for professional information purposes only. Chauvet expressly prohibits the usage, copy, storage, distribution, modification, or printing of this manual or its content for any other purpose without written consent from Chauvet.

Document Printing For better results, print this document in color, on letter size paper (8.5 x 11 in), double-sided. If using A4 paper (210 x 297 mm), configure your printer to scale the content accordingly.

Intended Audience Any person in charge of installing, operating, and/or maintaining this product should completely read through the guide that shipped with the product, as well as this manual, before installing, operating, or maintaining this product.

Disclaimer Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility for any errors or omissions in this document. Chauvet reserves the right to revise and make changes to the content of this document without obligation that Chauvet notify any person or company of such revision or changes. This does not in any way constitute a commitment by Chauvet to make such changes. Chauvet may issue a revision of this manual or a new edition to incorporate such changes.

Author	Date	Editor	Date
D. Coupe	7/6/15	A. Leon	7/6/15

Table of Contents

1. Before You Begin	1
What Is Included	1
Claims	1
Manual Conventions	1
Symbols	1
Safety Notes	2
Personal Safety.....	2
Mounting and Rigging	2
Power and Wiring.....	2
Operation	2
Expected LED Lifespan	2
2. Introduction	3
Description	3
Features	3
Overview	4
Overview	5
Dimensions	6
3. Setup	7
AC Power	7
AC Plug.....	7
Fuse Replacement.....	7
Battery Charge Notes.....	8
Storage Notes	8
Turn Product On	8
Turn Product Off	8
DMX Linking.....	9
DMX Modes	9
Master/Slave Connectivity.....	9
W-DMX™ Operation	10
Initial Setup	10
Configuration.....	10
Product Pairing.....	10
Lens Angle Adjustment.....	11
Positioning	11
4. Operation	13
Control Panel Description	13
Control Options	13
Programming	13
DMX Personality	13
DMX Control.....	13
Loss of Signal Setting	14
Static Color	14
Auto Programs	14
Edit Custom Programs.....	14
Strobe Personality.....	14
Battery Life.....	14
Master/Slave	15
Color Settings.....	15
Effect Key Programming	15
Color Key Programming.....	15
Dimmer Curves.....	16
Control Panel Lock.....	16
Password	16

Table of Contents

Settings Lock Out.....	16
Program Upload.....	17
Resetting Factory Defaults.....	17
Resetting Calibration Defaults.....	17
Setting the.....	17
White Color.....	17
Calibrating the.....	18
White Color.....	18
TOUR Notes.....	18
Master Dimmer.....	18
Red, Green, Blue, and Amber Color Selection.....	18
Color Macros.....	18
Strobe.....	18
Auto/Custom.....	18
Dimmer Speed.....	18
Menu Map.....	19
DMX Values.....	21
5. Technical Information.....	27
Product Maintenance.....	27
Returns.....	27
Technical Specifications.....	28
Contact Us.....	29

1. Before You Begin

What Is Included

Single Product:

- WELL™ Quad-M
- IEC power cord
- AC charger with heavy duty charging plug
- Controllers: IR remote

Six-piece Set:

- 1 Neutrik® powerCON® power cords
- 6-unit charging case
- Fixture raincoat
- Controllers: IR remote

Claims

Carefully unpack the product immediately and check the box to make sure all the parts are in the package and are in good condition.




If the box or the contents (the product and included accessories) appear damaged from shipping or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate your claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

Manual Conventions

Convention	Meaning
1~512	A range of values in the text
50/60	A set of mutually exclusive values in the text
<SET>	A button on the product's control panel
Settings	A product function or a menu option
MENU>Settings	A sequence of menu options
1~10	A range of menu values from which to choose in a menu
Yes/No	A set of two mutually exclusive menu options in a menu
ON	A unique value to be entered or selected in a menu

Symbols

Symbols	Meaning
	Critical installation, configuration, or operation information. Failure to comply with this information may cause the product not to work, damage third-party equipment, or cause harm to the operator.
	Important installation or configuration information. Failure to comply with this information may keep the product from working.
	Useful information.



The term “DMX” used throughout this manual refers to the USITT DMX512-A digital data transmission protocol.

Safety Notes

Read all the following Safety Notes before working with this product. These notes include important information about the installation, usage, and maintenance of this product.



This product contains no user-serviceable parts. Any reference to servicing in this user manual will only apply to properly trained Chauvet certified technicians. Do not open the housing or attempt any repairs.



All applicable local codes and regulations apply to proper installation of this product.

Personal Safety

- Avoid direct eye exposure to the light source while the product is on.
- Always disconnect this product from its battery charger and turn the battery switch off before servicing.
- Always connect this product's battery charger to a grounded circuit to avoid the risk of electrocution.
- Do not touch this product's housing when operating because it may be hot.
- Do not submerge this product or subject it to water jets (IP44). Regular outdoor operation under light rain or splashing water is fine.
- Do not hang this product, as this is a floor-standing product.
- Always carry this product using the built-in handle.
- Do not leave any flammable material within 50 cm of this product while operating or recharging the battery.

Mounting and Rigging

Power and Wiring

- Always make sure that you are connecting this product's battery charger to the proper voltage, as per the specifications in this manual or on the product's sticker.
- Never connect this product's battery charger to a dimmer pack or rheostat.
- Never disconnect this product's battery charger by pulling or tugging on the power cable.

Operation

- Do not operate this product if you see damage on the housing, lenses, or cables. In any of these cases, have the damaged parts replaced by an authorized technician at once.
- Do not cover the ventilation slots when the product is operating to avoid internal overheating.
- The maximum ambient temperature (Ta) is 104 °F (40 °C). Do not operate this product at a higher temperature.
- Do not close the flight case/charger lid when during charging.
- In case of a serious operating problem, stop using this product immediately!



Expected LED Lifespan

In the unlikely event that your Chauvet product may require service, contact Chauvet Technical Support.

LEDs gradually decline in brightness over time, mostly because of heat. Packaged in clusters, LEDs exhibit higher operating temperatures than in ideal, single-LED conditions. For this reason, using clustered LEDs at their fullest intensity significantly reduces the LEDs' lifespan. Under normal conditions, this lifespan can be 40,000 to 50,000 hours. If extending this lifespan is vital, lower the operating temperature by improving the ventilation around the product and reducing the ambient temperature to an optimal operating range. In addition, limiting the overall projection intensity may also help to extend the LEDs' lifespan.

2. Introduction


Description The WELL™ Quad-M (Wireless Event Light Luminaire) is a battery powered, portable upward wash light. It consists of a single product that contains the lithium ion battery, the LEDs, the LED drivers, and the main control. The battery provides up to 10 hours of runtime.

When purchased as a single product, it comes with a stand-alone single product battery charger. Additional batteries are available for purchase.


When purchased as a 6-piece set, they come with an empty flight case that has six storage bays and a built-in charger. Each storage bay in the flight case has its own battery charging connector. This allows recharging all six WELL™ Quad-M products simultaneously while in the flight case. The W-DMX™ (Wireless DMX) transmitter is available for purchase separately.

- Features**
- DMX Channels: 3, 4, 5, 6, 10, or 15
 - 16-bit dimming of individual colors as well as master dimmer
 - Lithium ion battery
 - IR remote controllable (remote included)
 - 10 hour battery life at full output
 - 10 hour charge time from 0 to 100%
 - Reflective mirror finish, blends with surroundings
 - Easy to use charger included

Overview

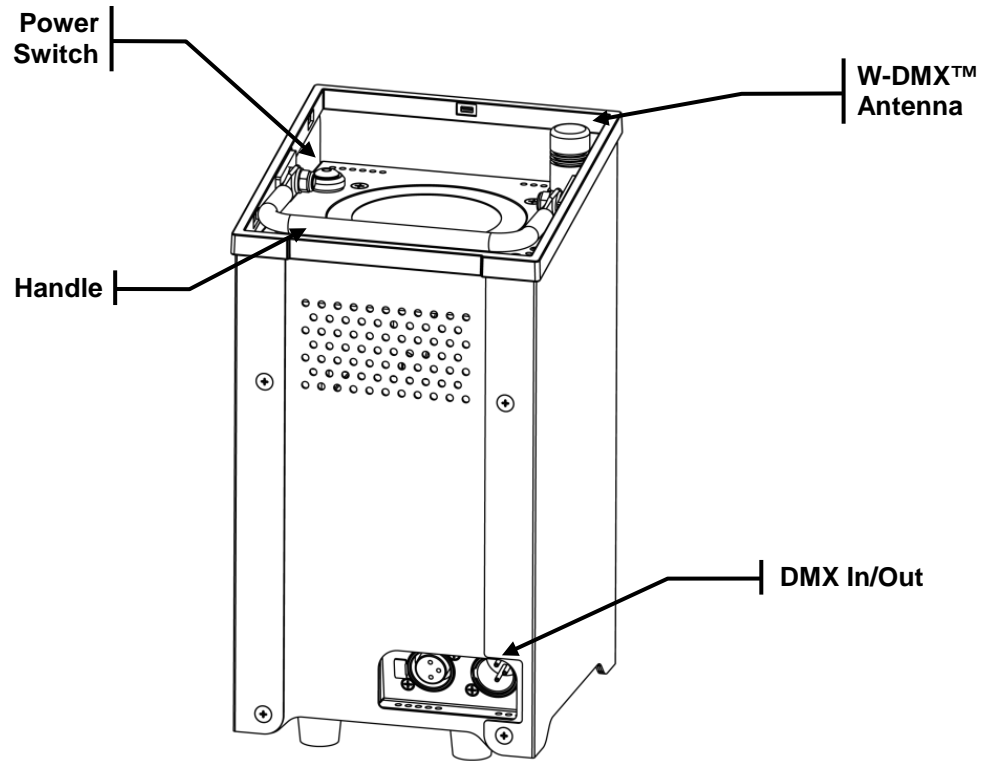


Back View

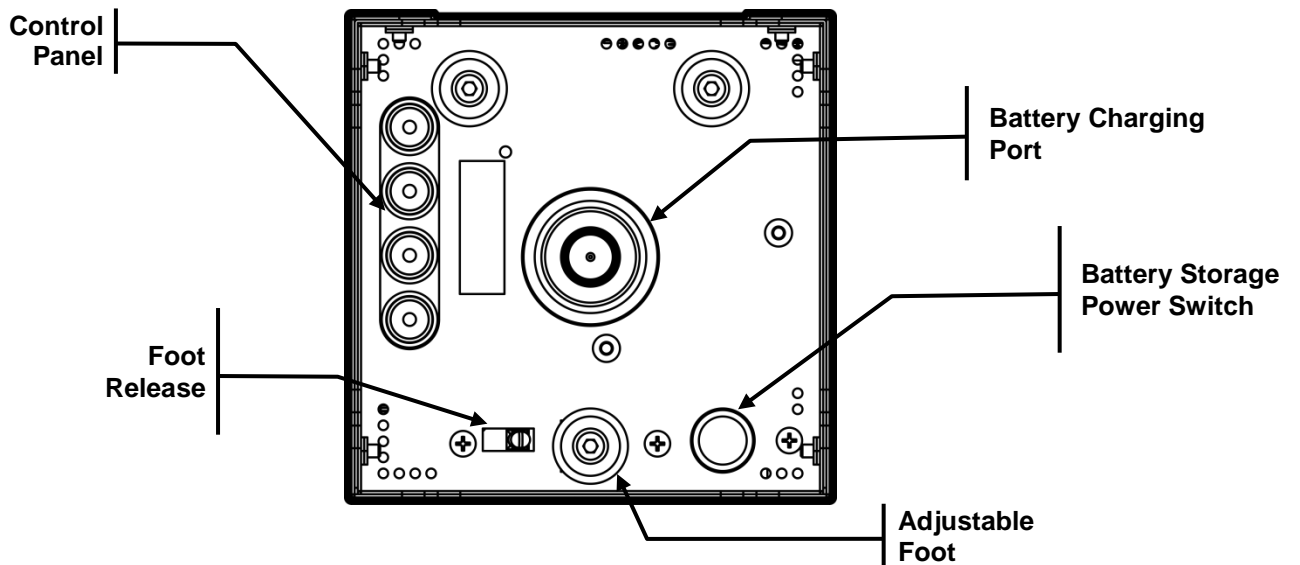



Bottom View

Overview

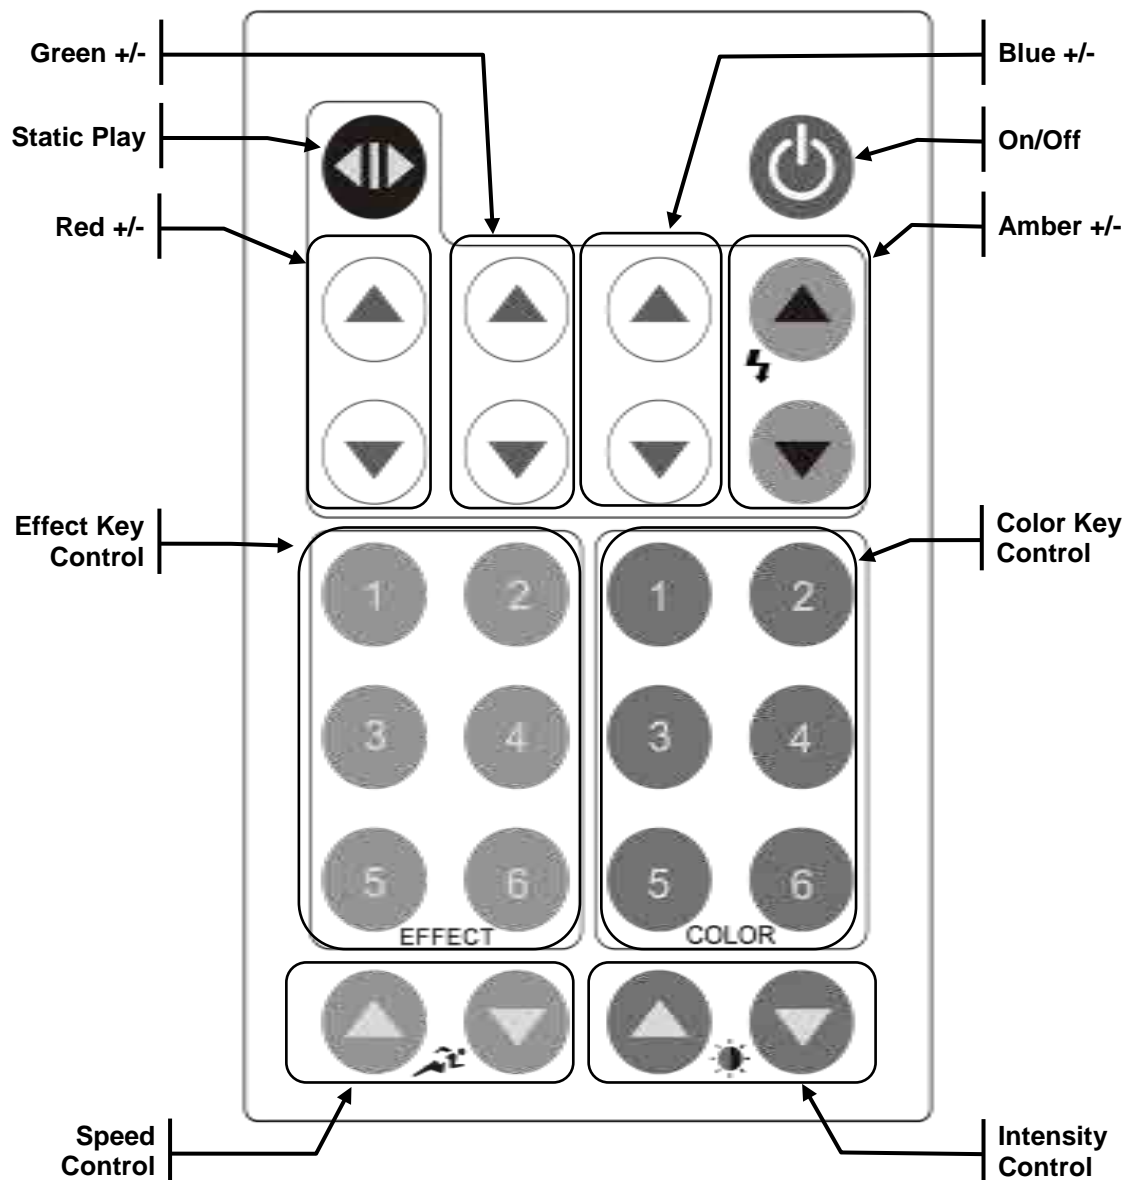

- To access the static colors on the remote, press and hold the static play button for 3–5 seconds before pressing the button for the desired color.
- The intensity control buttons only work in static color mode.
- **NOTE:** Intensity Control button response may be gradual.

Dimensions

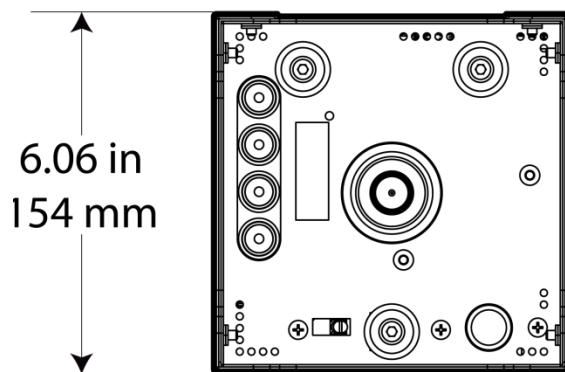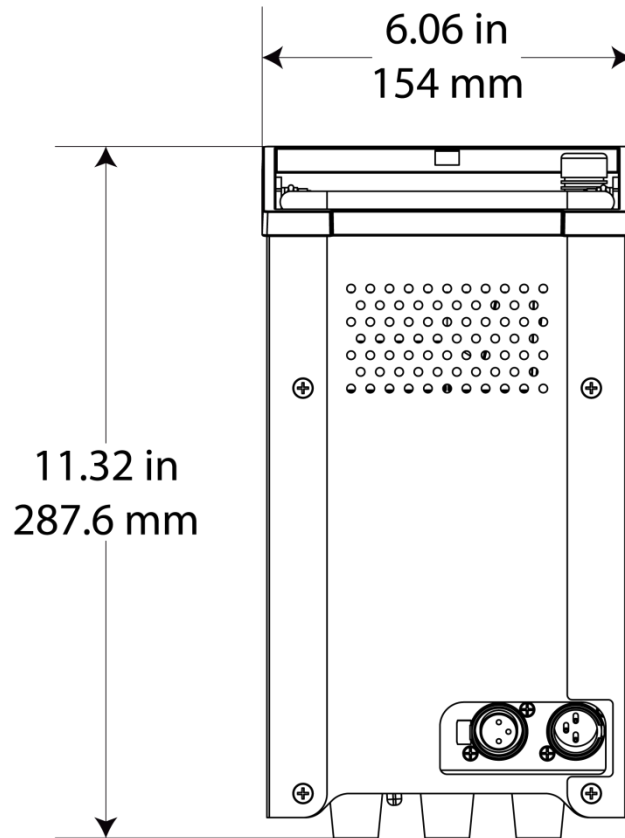

3. Setup

AC Power

Each WELL™ Quad-M has an auto-ranging battery charger, whether stand-alone or inside the flight case that works with an input voltage range of 100 to 240 VAC, 50/60 Hz. To determine the power requirements for each WELL™ Quad-M, refer to the label affixed to the product. For more information, see the [Technical Specifications](#) section.

The listed current rating indicates the maximum current draw during normal operation. For more information, you may download *Sizing Circuit Breakers* from the Chauvet website: www.chauvetpro.com.



Always connect this product's battery charger to a protected circuit with an appropriate electrical ground to avoid the risk of electrocution or fire.



Never connect this product's battery charger to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

AC Plug

The WELL™ Quad-M's battery charger comes with a power input cord terminated with an Edison plug (US market). If the power input cord that came with your product has no plug or you need to change the Edison plug, use the table below to wire the new plug.

Connection	Wire (U.S.)	Wire (Europe)	Screw Color
AC Live	Black	Brown	Yellow or Brass
AC Neutral	White	Blue	Silver
AC Ground	Green/Yellow	Green/Yellow	Green



Make sure to disconnect the product's power cord before replacing a blown fuse. Always replace the blown fuse with another of the same type and rating.

Fuse Replacement

The standalone battery charger has no external fuse. However, the flight case/charger comes with a replaceable fuse (T 6.3 A @ 250 V).

To change the fuse on the flight case/charger, do the following:

1. Disconnect the product from the power outlet.
2. With a Phillips #2 head screwdriver, unscrew the fuse holder cap from its housing.
3. Remove the blown fuse and replace it with a good fuse of the same type and rating (T 6.3 A @ 250 V).
4. Screw the fuse holder cap back in its place and reconnect power.



- Battery Charge Notes**
- Make sure to turn the battery storage switch on before connecting the product to the charger.
 - Always use the supplied charger to recharge the built-in battery.
 - Recharge the battery within three days of last use.
 - Recharge the battery to full capacity before storing this product.
 - For best results, charge the battery in a temperature between 32 °F (0 °C), and 95 °F (35 °C).
 - When charging the battery, keep the product at no less than 1 m from any open flame or hot plate.
 - When charging the battery inside the flight case/charger, keep the flight case's cover open.
 - Always charge the battery with the product in an upright position.
 - Do not keep charging the battery for more than 24 hours.
 - Perform a full discharge/recharge cycle every three months.
 - During charging, the green power indicator LED will illuminate solid, regardless of the level of charge of the battery.
 - Once fully charged, while still connected to the battery charger, the green power indicator LED will turn off.

- Storage Notes**
- Always store the unit in an upright position ($\leq 10^\circ$ tilt).
 - Recharge the battery to full capacity before storing the unit.
 - Store charged unit(s) in a dry environment, away from direct sunlight.
 - Turn the battery storage switch off if storing the unit for more than seven days.

- Turn Product On**
1. Turn the battery storage switch on.
 2. Push the On/Off switch on the top for more than three seconds (the built-in red LED will illuminate solid).
When not connected to the battery charger, the power status LED indicates the amount of remaining battery charge, as follows:
Green: >70% (100 to 70% charge)
Yellow: >20% (69 to 21% charge)
Red: Empty (20% to 0 charge)

- Turn Product Off**
1. Push the On/Off switch on the top for more than three seconds.
 2. If storing the product for more than seven days after recharging it, also turn the battery storage switch off.

DMX Linking You can link the WELL™ Quad-M to a DMX controller using a standard DMX serial connection or via W-DMX™. If using other DMX compatible products with the WELL™ Quad-M, you can control each individually with a single DMX controller.

- DMX Modes** The WELL™ Quad-M uses the standard DMX data connection for its **TOUR, TR16, ARC.1, AR1.D, ARC.2, AR2.D, AR2.S** and **HSV** DMX modes.
- Refer to the [Introduction](#) section for a brief description of these modes.
 - Refer to the [Operation](#) section to learn how to configure the WELL™ Quad-M to work in these modes.
 - The [DMX Values](#) section provides you with detailed information regarding the DMX modes.

Master/Slave Connectivity The Master/Slave mode allows a WELL™ Quad-M (master product) to control one or more products (slave products) without a DMX controller.

One WELL™ Quad-M becomes the master product either when running in static (STAT) mode or when using the automatic (AT) or customizable (PR) programs.

In addition, you must configure each of the slave products (via control panel) to operate in Slave (SLAV) mode. During Master/Slave operation, the slave products will operate in unison with the master product.

For more information, see the [Menu Map](#) section.



Do not connect a DMX controller to products operating in Master/Slave mode. The DMX controller signals may interfere with the signals from the master product.



- The [Operation](#) section of this manual provides detailed instructions on how to configure the Master and Slave products.
- If you need more information about DMX standards, Master/Slave connectivity, or the DMX cables needed in order to link the product to a DMX controller, you can download the *DMX Primer* from the Chauvet website: www.chauvetpro.com.
- Verify the DIMX and CURV settings are set to OFF for optimal control of the TR16 personality. For more information, see the [Menu Map](#) section.

W-DMX™ Operation

The product can operate in W-DMX™ mode up to 300 m (900 ft) from the W-DMX™ transmitter. For wireless operation, the W-DMX™ receiver inside the product must be paired with a W-DMX™ transmitter.

Initial Setup

1. Turn the W-DMX™ transmitter on.
2. Connect the W-DMX™ transmitter to a DMX controller.
3. Place the product within 300 m from the W-DMX™ transmitter.
4. Disconnect any DMX cable from the product.
5. Turn the product on.

Configuration

1. From the product's control panel, go to **RUN > DMX**.
2. Select the desired DMX start address. .
3. Go to **WDMX > ACTI**.
4. Select **ON**.

Product Pairing

Product currently paired with the transmitter

- If the product is paired with the W-DMX™ transmitter, a red LED on the On/Off switch will slowly flash. The product is ready to work in wireless mode.


Pairing the product with a new W-DMX™ transmitter

1. From the product's control panel, go to **WDMX > REST**.
2. Select **YES** (a red LED appears on the On/Off switch).
3. From the W-DMX™ transmitter, press **<RESET>** (the SIGNAL indicator will flash).
4. Once the transmitter has found the product, the SIGNAL indicator on the W-DMX™ transmitter will illuminate solid.
5. From the On/Off switch, the red LED flashes slowly indicating the presence of DMX signal.




W-DMX™ operation can be interrupted or inhibited by liquid masses between the transmitter and receiver such as water, snow, or people. For best results, keep the antenna clear of any liquid mass.

WDMX™ Setup

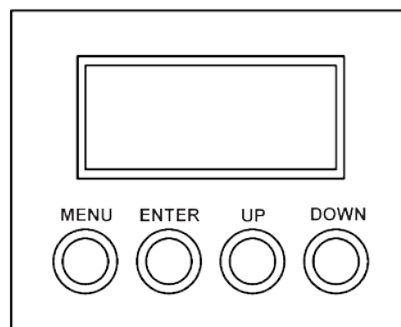


Control Panel

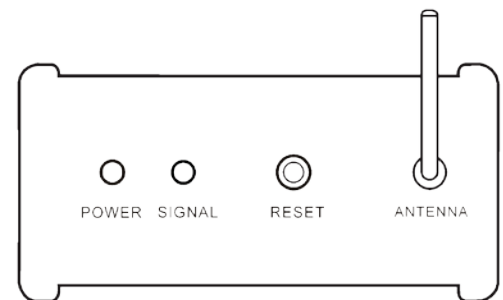

WDMX Transmitter

Lens Angle Adjustment

The product contains a single LED lens platform, that which allows the unit to be tilted from 55° up to 105° from the center.

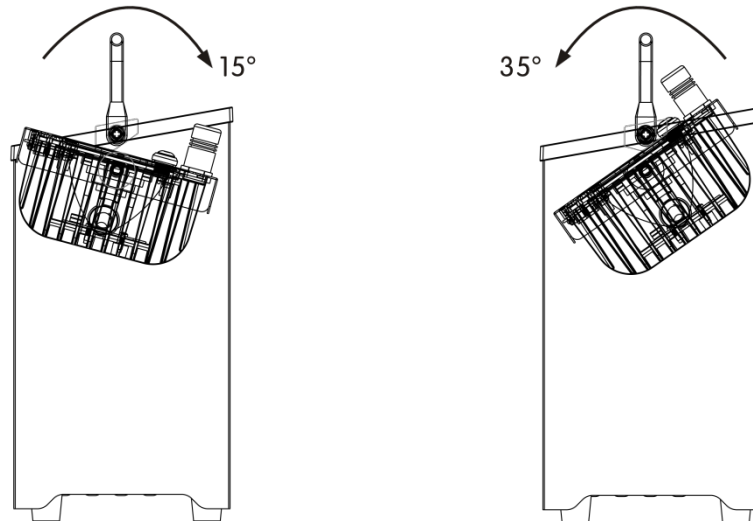


Positioning

The WELL™ Quad-M stands on the support legs and positioned on a hard, steady surface that can support its weight. You should not mount the product in any way.

- When selecting an installation location, consider easy access to this product for operation, programming adjustments, and routine maintenance.
- Make sure to place the product away from any flammable material.
- Do not mount the product in places where heavy rain, water jets, extreme temperature changes, or restricted ventilation may affect it.
- This is a floor-standing fixture. Do not hang this unit.
- Do not operate the unit in a sealed enclosure or in an area without air circulation.

Tilt Angle Procedure The WELL™ Quad-M stands on a hard, steady surface that can support its weight. Using the installed retractable foot, the product is adjustable by using the foot release lever up to 10°.

Mounting Diagram

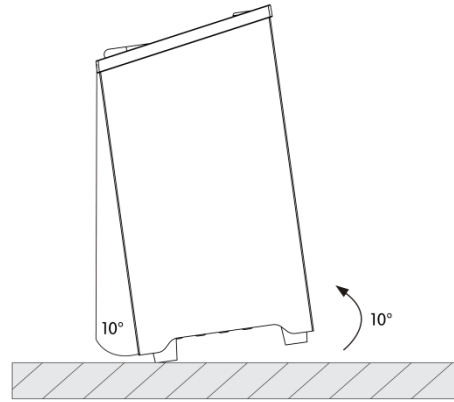

**Correct Floor
Mounting**

4. Operation

Control Panel Description

Button	Function
<MENU>	Exits from the current menu or function
<ENTER>	Enables the currently displayed menu or sets the currently selected value in to the current function
<UP>	Navigates upward through the menu options or increases the numeric value when in a function
<DOWN>	Navigates downward through the menu options or decreases the numeric value when in a function

Control Options

You can set the WELL™ Quad-M starting address in the 001 to 512 DMX range. This enables control of up to 34 products in the 15-channel **TR16** personality.

Programming

The menu map shows the main level and a variable number of programming levels for each option. For more information on how to use the menu options, refer to the [Menu Map](#) section.

- To go to the desired main level, press <MENU> repeatedly until the desired option displays on the control panel. Press <ENTER> to select. This will take you to the first programming level for that option.
- To select an option or value within the current programming level, press **UP** or <DOWN> until the option shows on the display. Press <ENTER> to select. In this case, if there is another programming level, you will see that first option, or you will see the selected value.
- Press <MENU> repeatedly to exit to the previous main level.

DMX Personality

This setting allows you to choose a particular DMX personality.

1. Go to the **PERS** main level.
2. Select the desired personality (**TOUR**, **TR16**, **ARC.1**, **AR1.D**, **ARC.2**, **AR2.D**, **AR2.S** or **HSV**).



For the highest starting address you can select for each personality, see the [DMX Values](#) section. Verify that the starting addresses on the products do not overlap due to the new personality setting.

DMX Control

In this mode, each product will respond to a unique starting address from the DMX controller. All products with the same starting address will respond in unison.

1. Select a DMX personality as shown in DMX Personality.
2. Set the running mode:
 - a. Go to the **RUN** main level.
 - b. Select the **DMX** programming level.
3. Set the starting address:
 - a. Go to **ADDR** main level.
 - b. Select the starting address (**D.001~512**).



The highest recommended starting address for each DMX mode are as follows:

DMX Mode	DMX Address	DMX Mode	DMX Address	DMX Mode	DMX Address
TOUR	503	ARC.2	509	HSV	510
ARC.1	510	AR2.D	508	TR16	498
AR1.D	509	AR2.S	507		

- Loss of Signal Setting** This setting controls how the product will respond when the DMX signal is lost.
1. Go to the **SET** main level, and select **DERR**.
 - a. Select **SAVE** to make the product use the last command used when the signal is lost.
 - b. Select **BLAK** to turn off the all the LEDs when the signal is lost.

- Static Color** The Static Color mode allows for permanent RGBA color mixing without a DMX controller.
1. Go to the **STAT** main level.
 2. Select the desired color (**RED, GREN, BLUE, or AMBR**).
 3. Select the desired color value (**000~255**).
 4. Repeat the steps for additional colors.
 5. Select **STRB**.
 6. Select the desired frequency (**00~20**).

- Auto Programs** Auto programs allow for dynamic RGBA color mixing without a DMX controller.
1. Go to **AUTO**.
 2. Select the desired auto (**AT. 01~10**) or custom program (**PR. 01~10**).
 3. Select the desired speed at which the chosen program will run (**P. 000~255**).



You cannot edit any of the auto programs (AUTO 01~10).

Edit Custom Programs

This setting allows the programming of up to 30 scenes for each of the 10 customizable programs, including colors and effects.

1. Go to the **EDIT** main level.
2. Select the desired auto program (**PR. 01~10**).
3. Select the desired scene (**SC. 01~30**).
4. Select the desired color or effect (**RED, GREN, BLUE, AMBR, STRB, TIME, or FADE**).
5. Select the color or effect value (**000~255** for colors and timers, or **00~20** for strobe).
6. Repeat the steps for additional colors or effects.
7. Return to the scene level (**SC. 01~30**).
8. Repeat the settings of colors and effects for the other scenes.

- Strobe Personality** This setting allows you to select the CLASSIC (01~20 Hz) strobe or SPECIAL (Random/Slow/Fast) strobe personalities.

1. Go to the **SET** main level.
2. Select a strobe personality (**SPEC** or **CLAS**).

- Battery Life** This setting allows the user to select the output intensity for a given runtime (battery life).

1. Go to **SET**.
2. Select **LIFE**.
3. Select a battery life (**ECON** or **LONG**).

Master/Slave The Master/Slave mode allows a group of WELL™ Quad-Ms (slave products) to simultaneously duplicate the output of another WELL™ Quad-M (master product) without a DMX controller.

1. Set each of the slave products:
 - a. Go to **RUN**.
 - b. Select **SLAVE**.
2. Set the master product:
 - a. Set the running mode to **DMX** (see [DMX Control](#)).
 - b. Select an auto or custom program as explained in Auto Programs above, or a static mix of colors.



- **The master product is the one that runs a program whether in Auto, Custom or Static Color mode.**
- **Do not connect a DMX controller to the products configured for Master/Slave operation. The DMX controller may interfere with signals from the master product.**
- **The master product should be the first product in the daisy chain.**

Color Settings The Color setting determines how the product generates the white color based on various RGB settings.

1. Go to the **SET** main level.
2. Select **COLR**.
3. Select **OFF**, **RGBW**, or **UC**.

OFF: When all the RGB faders are set to **255**, the output is maximum, although the resulting white color may not be balanced.

RGBW: When all the RGB faders are set to **255**, the resulting output is defined by the configured White color (see [White Calibration](#)).

UC: When all the RGB faders are set to **255**, the output matches that of less efficient products (Universal Color).

Effect Key Programming This setting allows you to program the effect keys on the IRC remote.

1. Go to **EDIT > EKY** level.
2. Select the desired key on the IRC remote to program (**EKY 1~6**).
3. Enter the desired program (**AT. 01~10** or **PR. 01~10**).
4. Repeat the steps to program additional effect keys.
5. Press the corresponding effect key to confirm programming.

Color Key Programming This setting allows you to program the color keys on the IRC remote.

1. Go to **EDIT > CKY** level.
2. Select the desired key to program (**CKY 1~6**).
3. Select the desired color or effect (**RED, GREEN, BLUE, or STROBE**).
4. Select the desired value (**000~255** for colors or **00~20** for strobe).
5. Repeat the steps to program additional color keys.
6. Press the corresponding color key to confirm programming.

Dimmer Curves This setting provides you with four options to simulate the dimming curve of an incandescent light product.

1. Go to the **SET** main level.
2. Select **DIMX**.
3. Select the desired dimmer curve (**OFF**, **DIM1**, **DIM2**, **DIM3**, or **DIM4**).

OFF The output is proportional (linear) to the dimmer and RGBA channel values.

DIM1~4: The output follows the dimmer and RGBA channel values based on the corresponding dimmer curve, being **DIM1** the fastest and **DIM4** the slowest.

Dimmer Curve Settings This setting allows you to select the dimmer curve shape using the red, green, blue, amber, and dimmer faders.

1. Go to the **SET** main level.
2. Select **CURV**.
3. Select the desired dimmer curve (**OFF**, **CV1**, **CV2**, or **CV3**).

OFF This output is proportional (linear) to the Dimmer and RGBA channel values.

CV1~3 This output follows the dimmer and RGBA channel values based on the corresponding dimmer curve, being **CV1** the fastest and **CV3** the slowest.



For optimum control of the 16-bit dimming channels in the TR16 personality, be sure that both dimming curves in SET > DIMX and SET > CURV are set to OFF

Control Panel Lock This setting enables you to activate or disable the control panel lock, which keeps non-authorized personnel from changing the product's settings.

1. Go to the **KEY** main level.
2. Select **ON** or **OFF**.



When the control panel lock is active, the product will prompt you to enter the password after 30 seconds of control panel inactivity or after turning on the product.

Password If you are prompted to enter a password on the product, press the buttons in the following order: **UP > DOWN > UP > DOWN > ENTER**. The product's password cannot be changed and must be entered whenever you are prompted.

Settings Lock Out This setting enables you to activate or disable the main level **SET** (settings) lock, which keeps unauthorized personnel from changing the product's settings.

1. Go to the **SET** main level.
2. Select **SLCK**.
3. Select **ON** or **OFF**.

Program Upload

This option allows you to duplicate the custom programs of a product onto another product using the Master/Slave mode.

1. Configure and connect the products in a Master/Slave arrangement, where the master product has the custom programs you want to transfer to the slave products.
2. From the master product, go to the **SET** main level.
3. Select **UPLD**.
4. When **PASS** shows, press **<ENTER>**.
5. Enter the master access password (see [Control Panel Lock](#)).
6. When **SEND** shows, press **<ENTER>** to start the upload.
7. Wait for the upload process to finish (the display will show **OK** before continuing or turning the products off).

The Master/Slave products will provide the status of the process by lighting up as follows:



- **Yellow indicates that the upload process is running.**
- **Green indicates that the upload process completed successfully.**
- **Red indicates that the upload process failed due to an error. Recheck all cable connections and restart the process. If the issue persists, contact Chauvet Technical Support.**



Do not upload the data from a WELL™ Quad-M to a different product, as the other product may become inoperative.

Resetting Factory Defaults

This setting allows you to reset the product's default values, including the custom programs.

1. Go to the **SET** main level.
2. Select **REST**.
3. When **PASS** shows, press **<ENTER>**.
4. Enter the master access password (see [Control Panel Lock](#)).
5. Wait for the reset process to finish.

Resetting Calibration Defaults

This setting allows you to reset the product's default values of the color macros in [Whites Setting](#) or [Whites Calibration](#).

1. Go to the **CAL** main level.
2. When **PASS** shows, press **<ENTER>**.
3. Enter the master access password.
4. Go to **CALR**.
5. When **PASS** shows, press **<ENTER>**.
6. Enter the master access password.

Setting the White Color

This setting allows you to select and edit the temperature of the white colors used in channel 6 when in the **TOUR** mode or channel 11 when in **TR16** mode.

1. Go to the **CAL** main level.
2. Enter the master access password as described in [Control Panel Lock](#).
3. Go to **CAL1**.
4. Select a white color (**WH.01~11**).
5. Select a color (**RED, GREN, BLUE, or AMBR**).
6. Select a color value (**000~255**).
7. Repeat for the other colors.

Calibrating the White Color

This setting allows you to calibrate the white color when **RGBW** and the DMX controller's red, green, and blue faders are set to "255".

1. Go to the **CAL** main level.
2. Enter the master access password ([Control Panel Lock](#)).
3. Go to **CAL2**.
4. Select the desired color (**RED**, **GREN**, or **BLUE**).
5. Select a desired color value (**000** to **255**).
6. Repeat the steps for additional colors.



When selecting **CAL > CAL2 >**, you will only be able to define the values of red, green, and blue.



The values of **RED**, **GREN** (green), and **BLUE** configured from **CAL > CAL2 >** will define the color temperature shown when the RGB faders are set to "255" if **SET > COLR > RGBW** is active.

TOUR Notes

These notes clarify the way the **TOUR** DMX personality works.

Master Dimmer

- Channel 1 controls the intensity of the currently projected color.
- When the slider is at the highest position (**100%**), the intensity of the output is at maximum.

Red, Green, Blue, and Amber Color Selection

- Channels 2 through 5 control the intensity ratio of each of the red, green, blue, and amber LEDs.
- When these channels are at the highest position (**100%**), the intensity of each color is at maximum if **SET > COLR** is **OFF**.
- You can combine channels 2 through 5 to create over one trillion colors.

Color Macros

- Channel 6 selects the required Color Macro.
- Channel 6 has priority over channels 2 through 6.
- Channel 1 controls the intensity of the Color Macro.

Strobe

- Channel 7 controls the strobe frequency (not the intensity) of channels 2 through 6.
- Channel 7 can strobe channels 2 through 5 when not running macros, allowing the individual faders (R, G, B, and A), as well as channel 1 (D), to control the output intensity.
- Channel 7 can strobe channel 6 when running macros, allowing channel 6 to select the macro and channel 1 to control the output intensity.

Auto/Custom

- Channel 8 selects the preset auto programs **AT.01~10** or the custom programs **PR.01~10**.
- When activating the custom programs **PR.01~10**, you can control the Step Time and Fade Time using channels 2 and 3, respectively.
- Channel 8 has priority over channels 2 through 7.
- Channel 9 controls the speed at which each auto program plays.

Dimmer Speed

- Channel 10 selects the Dimmer mode and speed. The Dimmer mode provides four different options to simulate the dimming curve of an incandescent lighting product.
- When Dimmer is set to **OFF**, the changes in the RGBA and Master Dimmer faders are linear.
- When Dimmer is set to **DIM1~DIM4**, **DIM1** is the fastest dimmer curve and **DIM4** is the slowest.

Menu Map

Main Level	Programming Levels			Description		
STAT	RED	000~255		Combine Red, Green, Blue, and Amber to make a custom color		
	GREN					
	BLUE					
	AMBR					
	STRB	00~20		Selects the strobe frequency (0~20 Hz)		
AUTO	AT.	01~10	P. 000~255	10 automatic programs		
	PR.			10 customizable programs		
RUN	DMX			DMX mode		
	SLAV			Master/Slave mode		
ADDR	D.	001~512		Selects the DMX starting address		
PERS	TOUR			10 Channels: R/G/B/A, dimmer, strobe, color macro, auto/custom, dimmer speed, auto speed		
	TR16			15 Channels: 16-bit- R/G/B/A and dimmer; strobe, color macro, auto/custom, dimmer speed, auto speed		
	ARC.1			3-channel: R/G/B control		
	AR1.D			4-channel: R/G/B, dimmer		
	ARC.2			4-channel: R/G/B/A control		
	AR2.D			5-channel: R/G/B/A, dimmer		
	AR2.S			6-channel: R/G/B/A, dimmer, strobe		
	HSV			3-channel: HSV control		
EDIT	PR. 01~10	SC. 01~30	RED	000~255	Combine Red, Green, Blue, and Amber to generate a custom color (0~100%)	
			GREN			
			BLUE			
			AMBR			
			STRB	00~20		Selects the strobe frequency (0~20 Hz)
			TIME	000~255		Defines the step duration (0~100%)
	FADE	Defines the fade duration (0~100%)				
	EKY	1~6	AT.	01~10	Assigns automatic programs to the auto keys on the IRC	
			PR		Assigns custom programs to the auto keys on the IRC	
	CKY	1~6	RED	000~255	Assigns color and intensity to the color keys on the IRC	
			GREN			
			BLUE			
AMBR						
STRB			00~20	Assigns strobe and frequency to the color keys on the IRC		

Menu Map (Cont.)

Main Level	Programming Levels				Description	
SET	KEY	ON			Turns the password on or off	
		OFF				
	UPLD	PASS (Enter Passcode)	SEND/ OK		Uploads custom programs to other WELL™ Quad-Ms	
	REST	PASS (Enter Passcode)	SEND/ OK		Defaults product to factory settings	
	COLR	OFF			RGB set to "255" = max. output	
		RGBW			RGB set to "255" = balanced white	
		UC.			Universal color balance	
	DIMX	OFF			No dimmer	
		DIM1			Dimmer curve	
		DIM2				
		DIM3				
		DIM4				
	CURV	OFF			No dimmer	
		CV1			Slow (CV3) to fast (CV1) dimmer curves	
		CV2				
		CV3				
	DERR	SAVE			Blacks out fixture upon loss of DMX	
		BLAK			Continues with last command upon loss of DMX control	
	SLCK	OFF			SET main level access lock	
ON						
STRB	SPEC			Selects strobe personality used in TOUR, and TR16 personalities		
	CLAS					
LIFE	LONG			Long run time (approx. 12 hours)		
	ECON			Standard run time (approx. 10 hours)		
CAL	PASS (Enter Passcode)	CAL1	WH. 01~11	RED	000~2 55	Modifies the color macros used in the TOUR and TR16 personalities
				GREN		
		BLUE				
		AMBR				
	CAL2	RED	Defines the color temperature used when COLR is set to RGBW			
GREN						
BLUE						
CALR	PASS (Enter Passcode)		Defaults CAL to factory settings			
WDMX	ACTI	ON			Activates/deactivates W-DMX™ receiver	
		OFF				
	REST	NO		Resets receiver to pair with transmitter		
YES	OK					

DMX Values

TOUR	Channel	Function	Value	Percent/Setting
	1	Dimmer	000 ó 255	0~100%
	2	Red	000 ó 255	0~100% (Step Time if Custom 1~10 active)
	3	Green	000 ó 255	0~100% (Fade Time if Custom 1~10 active)
	4	Blue	000 ó 255	0~100%
	5	Amber	000 ó 255	0~100%
6		Color Macro + White Balance	000 ó 010	No Function
			011 ó 030	R: 100% G: 0~100% B: 0
			031 ó 050	R: 100%~0 G: 100% B: 0
			051 ó 070	R: 0 G: 100% B: 0~100%
			071 ó 090	R: 0 G: 100%~0 B: 100%
			091 ó 110	R: 0~100% G: 0 B: 100%
			111 ó 130	R: 100% G: 0 B: 100%~0
			131 ó 150	R: 100% G: 0~100% B: 0~100%
			151 ó 170	R: 100%~0 G: 100%~0 B: 100%
			171 ó 200	R: 100% G: 100% B: 100% A: 100%
			201 ó 205	White 1
			206 ó 210	White 2
			211 ó 215	White 3
			216 ó 220	White 4
			221 ó 225	White 5
			226 ó 230	White 6
			231 ó 235	White 7
		236 ó 240	White 8	
		241 ó 245	White 9	
		246 ó 250	White 10	
		251 ó 255	White 11	
		Special Strobe	000 ó 009	No Function
			010 ó 099	Slow to Fast
			100 ó 109	No Function
			110 ó 179	Lighting Effect Slow to Fast
			180 ó 189	No Function
			190 ó 255	Random
7*		Classic Strobe	000 ó 009	No Function
			010 ó 019	1 Hz
			020 ó 029	2 Hz
			030 ó 039	3 Hz
			040 ó 049	4 Hz
			050 ó 059	5 Hz
			060 ó 069	6 Hz
			070 ó 079	7 Hz
			080 ó 089	8 Hz
			090 ó 099	9 Hz
			100 ó 109	10 Hz
			110 ó 119	11 Hz
			120 ó 129	12 Hz
			130 ó 139	13 Hz
			140 ó 149	14 Hz
			150 ó 159	15 Hz
			160 ó 169	16 Hz
		170 ó 179	17 Hz	
		180 ó 189	18 Hz	
		190 ó 199	19 Hz	
		200 ó 255	20 Hz	

*Select strobe function in the main menu under **SET > STRB**, select **SPEC** or **CLAS**

DMX Values (Cont.)

TOUR (Cont.)	Channel	Function	Value	Percent/Setting
	8	Programs	000 ó 040	No Function
			041 ó 050	Auto 1
			051 ó 060	Auto 2
			061 ó 070	Auto 3
			071 ó 080	Auto 4
			081 ó 090	Auto 5
			091 ó 100	Auto 6
			101 ó 110	Auto 7
			111 ó 120	Auto 8
			121 ó 130	Auto 9
			131 ó 140	Auto 10
			141 ó 150	Custom 1
			151 ó 160	Custom 2
			161 ó 170	Custom 3
			171 ó 180	Custom 4
	181 ó 190	Custom 5		
	191 ó 200	Custom 6		
	201 ó 210	Custom 7		
	211 ó 220	Custom 8		
	221 ó 230	Custom 9		
	231 ó 255	Custom 10		
	9	Auto Speed	000 ó 255	0~100%
	10	Dimmer Speed	000 ó 009	Preset dimmer speed from display menu
			010 ó 029	Linear dimmer
			030 ó 069	Nonlinear dimming curve 1 (fastest)
			070 ó 129	Nonlinear dimming curve 2
			130 ó 189	Nonlinear dimming curve 3
			190 ó 255	Nonlinear dimming curve 4 (slowest)

DMX Values (Cont.)

TR16	Channel	Function	Value	Percent/Setting
	1	Dimmer	000 ó 255	0~100%
	2	Fine Dimmer	000 ó 255	0~100%
	3	Red	000 ó 255	0~100%
	4	Fine Red	000 ó 255	0~100%
	5	Green	000 ó 255	0~100%
	6	Fine Green	000 ó 255	0~100%
	7	Blue	000 ó 255	0~100%
	8	Fine Blue	000 ó 255	0~100%
	9	Amber	000 ó 255	0~100%
	10	Fine Amber	000 ó 255	0~100%
	11	Color Macro + White Balance	000 ó 010	No Function
			011 ó 030	R: 100% G: 0~100% B: 0
			031 ó 050	R: 100%~0 G: 100% B: 0
			051 ó 070	R: 0 G: 100% B: 0~100%
			071 ó 090	R: 0 G: 100%~0 B: 100%
			091 ó 110	R: 0~100% G: 0 B: 100%
			111 ó 130	R: 100% G: 0 B: 100%~0
			131 ó 150	R: 100% G: 0~100% B: 0~100%
			151 ó 170	R: 100%~0 G: 100%~0 B: 100%
			171 ó 200	R: 100% G: 100% B: 100% A: 100%
			201 ó 205	White 1
			206 ó 210	White 2
			211 ó 215	White 3
			216 ó 220	White 4
			221 ó 225	White 5
			226 ó 230	White 6
			231 ó 235	White 7
	236 ó 240	White 8		
	241 ó 245	White 9		
	246 ó 250	White 10		
	251 ó 255	White 11		

DMX Values (Cont.)

TR16 (Cont.)	Channel	Function	Value	Percent/Setting
12*	Special Strobe		000 ó 009	No Function
			010 ó 099	Slow to Fast
			100 ó 109	No Function
			110 ó 179	Lighting Effect Slow to Fast
			180 ó 189	No Function
			190 ó 255	Random
	Classic Strobe		000 ó 009	No Function
			010 ó 019	1 Hz
			020 ó 029	2 Hz
			030 ó 039	3 Hz
			040 ó 049	4 Hz
			050 ó 059	5 Hz
			060 ó 069	6 Hz
			070 ó 079	7 Hz
			080 ó 089	8 Hz
			090 ó 099	9 Hz
			100 ó 109	10 Hz
			110 ó 119	11 Hz
			120 ó 129	12 Hz
			130 ó 139	13 Hz
	140 ó 149	14 Hz		
	150 ó 159	15 Hz		
	160 ó 169	16 Hz		
	170 ó 179	17 Hz		
	180 ó 189	18 Hz		
	190 ó 199	19 Hz		
	200 ó 255	20 Hz		
13	Programs		000 ó 040	No Function
			041 ó 050	Auto 1
			051 ó 060	Auto 2
			061 ó 070	Auto 3
			071 ó 080	Auto 4
			081 ó 090	Auto 5
			091 ó 100	Auto 6
			101 ó 110	Auto 7
			111 ó 120	Auto 8
			121 ó 130	Auto 9
			131 ó 140	Auto 10
			141 ó 150	Custom 1
			151 ó 160	Custom 2
			161 ó 170	Custom 3
			171 ó 180	Custom 4
			181 ó 190	Custom 5
			191 ó 200	Custom 6
			201 ó 210	Custom 7
			211 ó 220	Custom 8
			221 ó 230	Custom 9
	231 ó 255	Custom 10		

*Select strobe function in the main menu under **SET > STRB**, select **SPEC** or **CLAS**

DMX Values (Cont.)

TR16 (Cont.)	Channel	Function	Value	Percent/Setting
	14	Auto Speed	000 ó 255	0~100%
	15	Dimmer Speed	000 ó 009 010 ó 029 030 ó 069 070 ó 129 130 ó 189 190 ó 255	Preset dimmer speed from display menu Linear dimmer Nonlinear dimming curve 1 (fastest) Nonlinear dimming curve 2 Nonlinear dimming curve 3 Nonlinear dimming curve 4 (slowest)
ARC.1	Channel	Function	Value	Percent/Setting
	1	Red	000 ó 255	0~100%
	2	Green	000 ó 255	0~100%
	3	Blue	000 ó 255	0~100%
AR1.D	Channel	Function	Value	Percent/Setting
	1	Dimmer	000 ó 255	0~100%
	2	Red	000 ó 255	0~100%
	3	Green	000 ó 255	0~100%
	4	Blue	000 ó 255	0~100%
ARC.2	Channel	Function	Value	Percent/Setting
	1	Red	000 ó 255	0~100%
	2	Green	000 ó 255	0~100%
	3	Blue	000 ó 255	0~100%
	4	Amber	000 ó 255	0~100%
AR2.D	Channel	Function	Value	Percent/Setting
	1	Dimmer	000 ó 255	0~100%
	2	Red	000 ó 255	0~100%
	3	Green	000 ó 255	0~100%
	4	Blue	000 ó 255	0~100%
	5	Amber	000 ó 255	0~100%

DMX Values (Cont.)

AR2.S	Channel	Function	Value	Percent/Setting
	1	Dimmer	000 ó 255	0~100%
	2	Red	000 ó 255	0~100%
	3	Green	000 ó 255	0~100%
	4	Blue	000 ó 255	0~100%
	5	Amber	000 ó 255	0~100%
	6	Classic Strobe	000 ó 009	No Function
			010 ó 019	1 Hz
			020 ó 029	2 Hz
			030 ó 039	3 Hz
			040 ó 049	4 Hz
			050 ó 059	5 Hz
			060 ó 069	6 Hz
			070 ó 079	7 Hz
			080 ó 089	8 Hz
			090 ó 099	9 Hz
			100 ó 109	10 Hz
			110 ó 119	11 Hz
			120 ó 129	12 Hz
			130 ó 139	13 Hz
			140 ó 149	14 Hz
			150 ó 159	15 Hz
	160 ó 169	16 Hz		
	170 ó 179	17 Hz		
	180 ó 189	18 Hz		
	190 ó 199	19 Hz		
	200 ó 255	20 Hz		
HSV	Channel	Function	Value	Percent/Setting
	1	Hue	000 ó 255	0~100%
	2	Saturation	000 ó 255	0~100%
	3	Value	000 ó 255	0~100%

5. Technical Information

Product Maintenance

To maintain optimum performance and minimize wear, you should clean this product frequently. Usage and environment are contributing factors in determining the cleaning frequency.

As a rule, clean this product at least twice a month. Dust build-up reduces light output performance and can cause overheating. This can lead to reduced light source life and increased mechanical wear.

To clean your product:

- Unplug the product from power.
- Wait until the product is at room temperature.
- Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external vents.
- Clean all external surfaces with a mild solution of non-ammonia glass cleaner or isopropyl alcohol.
- Apply the solution directly to a soft, lint-free cotton cloth or a lens cleaning tissue.
- Wipe any dirt or grime to the outside edges of the lens surface.
- Gently polish the lens surfaces until they are free of haze and lint.



Always dry the external surfaces thoroughly and carefully after cleaning them.

Returns

You must send the product prepaid, in the original box, and with the original packing and accessories. Chauvet will not issue call tags.

Call Chauvet and request a Return Merchandise Authorization (RMA) number before shipping the product. Be prepared to provide the model number, serial number, and a brief description of the cause(s) for the return.

Clearly label the package with an RMA number. Chauvet will refuse any product returned without an RMA number.



DO NOT write the RMA number directly on the box. Instead, write it on a properly affixed label.

Once you have received the RMA number, include the following information on a piece of paper inside the box:

- Your name
- Your address
- Your phone number
- The RMA number
- A brief description of the problem(s)

Be sure to pack the product properly. Any shipping damage resulting from inadequate packaging will be the customer's responsibility. FedEx packing or double-boxing are recommended.



Chauvet reserves the right to use its own discretion to repair or replace returned product(s).

Technical Specifications

Dimensions and Weight	Length	Width	Height	Weight
	6.06 in (154 mm)	6.06 in (154 mm)	11.32 in (287 mm)	12.2 lb (5.53 kg)

Note: Dimensions in inches rounded to the nearest decimal digit.

Power	Power Supply Type	Range	Voltage Selection
	Switching (External)	100~240 V, 50/60 Hz	Auto-ranging

Parameter	120 V, 60 Hz	230 V, 50 Hz
Consumption (Single Product)	79 W	84 W
Consumption (Flight Case)	474 W	504 W
Operating(Single Product)	0.65 A	0.36 A
Operating (Flight Case)	3.9 A	2.16 A
Fuse (Flight Case)	T 6.3 A, 250 V	T 6.3 A, 250 V

Power I/O	U.S./Worldwide	Europe
Power input connector (Single product)	Proprietary	Proprietary
Power input connector (Flight case)	Neutrik® powerCON® A	Neutrik® powerCON® A
Power cord plug	Edison (U.S.)	Local plug

Light Source	Type	Power	Lifespan
	LED	40 W	50,000 hours

Color	Quantity	Current
quad-color RGBA	1	650 mA

Photo Optic	Parameter	Standard Optics	with Color Filter
	Illuminance @ 5 m	504 lx	246 lx
	Beam angle	9°	15°
	Field angle	22.5°	28°

Thermal	Max. External Temperature	Cooling System
	104 °F (40 °C)	Convection

DMX	I/O Connectors	Connector Type	Channel Range
	3- and 5-pin XLR	Sockets	3, 4, 5, 6, 10, 15

Ordering	Product Name	Item Code	UPC Number
	WELL™ Quad-M	01030719	781462210670
	WELL™ Quad-M x 6	01030736	781462210847

Contact Us

WORLD HEADQUARTERS - Chauvet

General Information

Address: 5200 NW 108th Avenue
Sunrise, FL 33351

Voice: (954) 577-4455

Fax: (954) 929-5560

Toll free: (800) 762-1084

Technical Support

Voice: (954) 577-4455 (Press 4)

Fax: (954) 756-8015

Email: tech@chauvetlighting.com

World Wide Web www.chauvetlighting.com

UNITED KINGDOM AND IRELAND - Chauvet Europe Ltd.

General Information

Address: Unit 1C
Brookhill Road Industrial Estate
Pinxton, Nottingham, UK
NG16 6NT

Voice: +44 (0)1773 511115

Fax: +44 (0)1773 511110

Technical Support

Email: uktech@chauvetlighting.com

World Wide Web www.chauvetlighting.co.uk

MEXICO - Chauvet Mexico

General Information

Address: Av. Santa Ana 30
Parque Industrial Lerma
Lerma, Mexico C.P. 52000

Voice: +52 (728) 285-5000

Technical Support

Email: servicio@chauvet.com.mx

World Wide Web www.chauvet.com.mx

CHAUVET EUROPE - Chauvet Europe BVBA

General Information

Address: Stokstraat 18
9770 Kruishoutem
Belgium

Voice: +32 9 388 93 97

Technical Support

Email: Eutech@chauvetlighting.eu

World Wide Web www.chauvetlighting.eu

Outside the U.S., United Kingdom, Ireland, Mexico, or Benelux contact the dealer of record. Follow their instructions to request support or to return a product. Visit our website for contact details.

